



Unit 5S , Lanvale Estate, St. Columb Major Ind. Est, CORNWALL, TR9 6SF **Telephone:** 01637 881520

Upgrading your 200mm Coil Winder MK1 to ARM Controller.

Version 1.0

17th June 2015.

This documentation applies for use of the software on the following machines:


- CNC 200mm Coil Winder MK1

<http://www.ukcnc.net>

You will need your CNC 200mm Coil Winder MK1 and the new Arm Controller board.




Remove lid screws

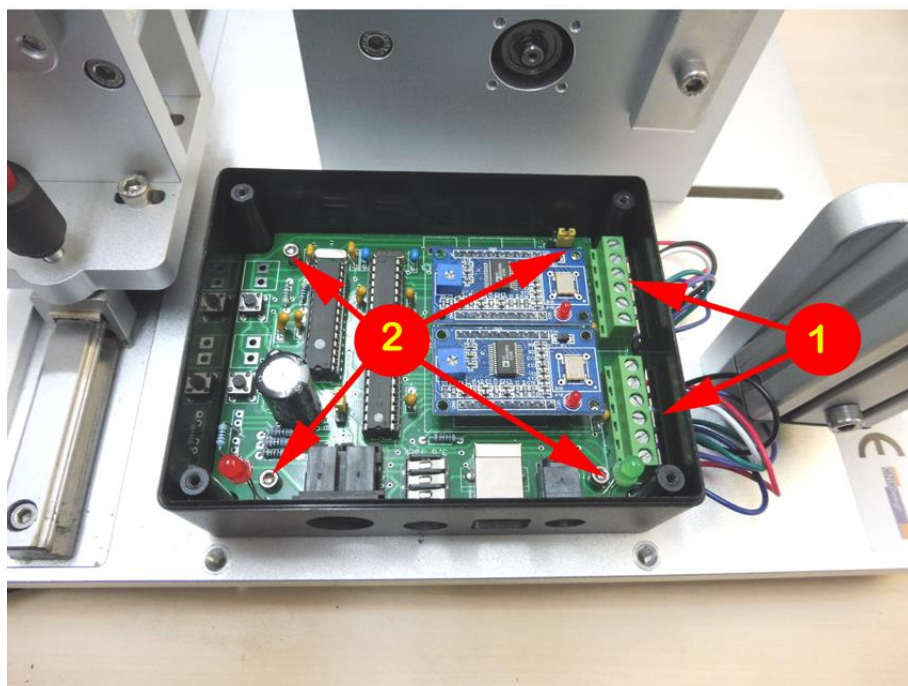

- 1** Disconnect wires
- 2** Remove bolts



**Place in new ARM Controller.
Screw in place and re-attach wires**

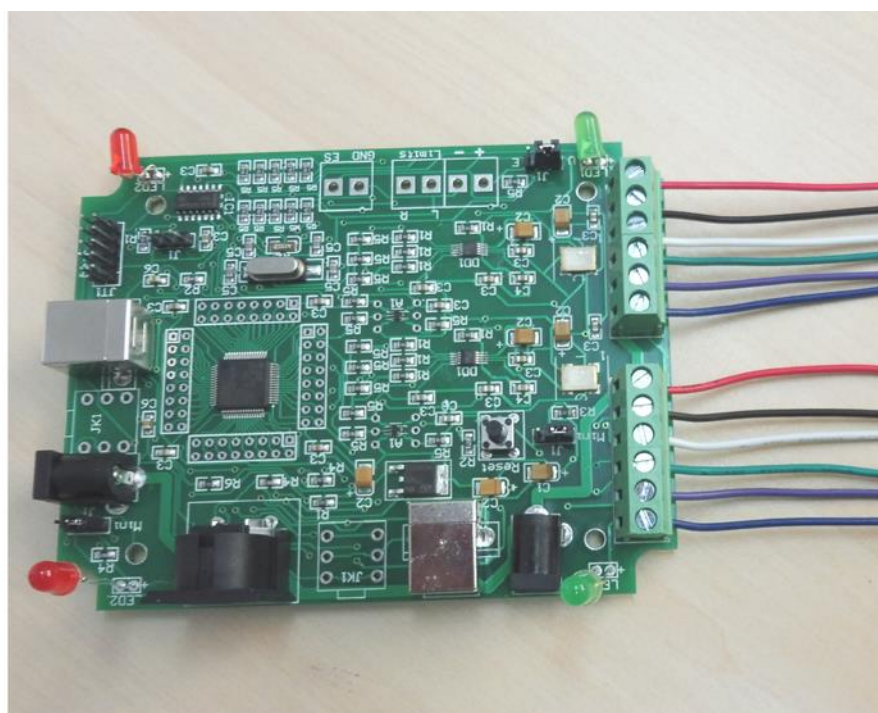

**Make sure the wires are in the exact order
as shown in the above picture.
The top connector goes to the feeder motor
The bottom connector goes to the bobbin motor**



Screw the lid back on and all done !