



CNC D-500 MDF Bed Instructions V1.0





<http://www.ukcnc.net>

Contents

Checklist	2
Build Instructions	3

Checklist
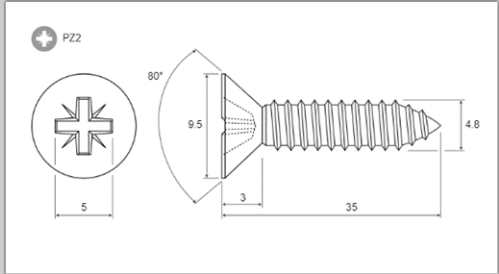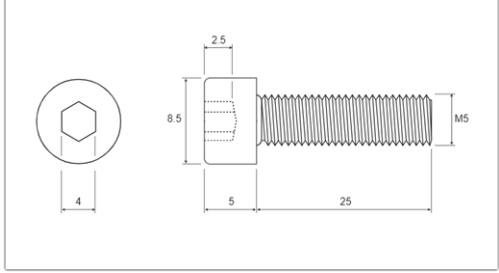
<http://www.ukcnc.net>


Name	Dimensions	Quantity	Packing Check	Customer Check
5 x 35mm Wood Screws		12	<input type="checkbox"/>	<input type="checkbox"/>
M5 x 25mm		30	<input type="checkbox"/>	<input type="checkbox"/>
MDF Base Bed		1	<input type="checkbox"/>	<input type="checkbox"/>
500mm MDF		1	<input type="checkbox"/>	<input type="checkbox"/>


CNCDesign

Limited


Build Instructions

<http://www.ukcnc.net>

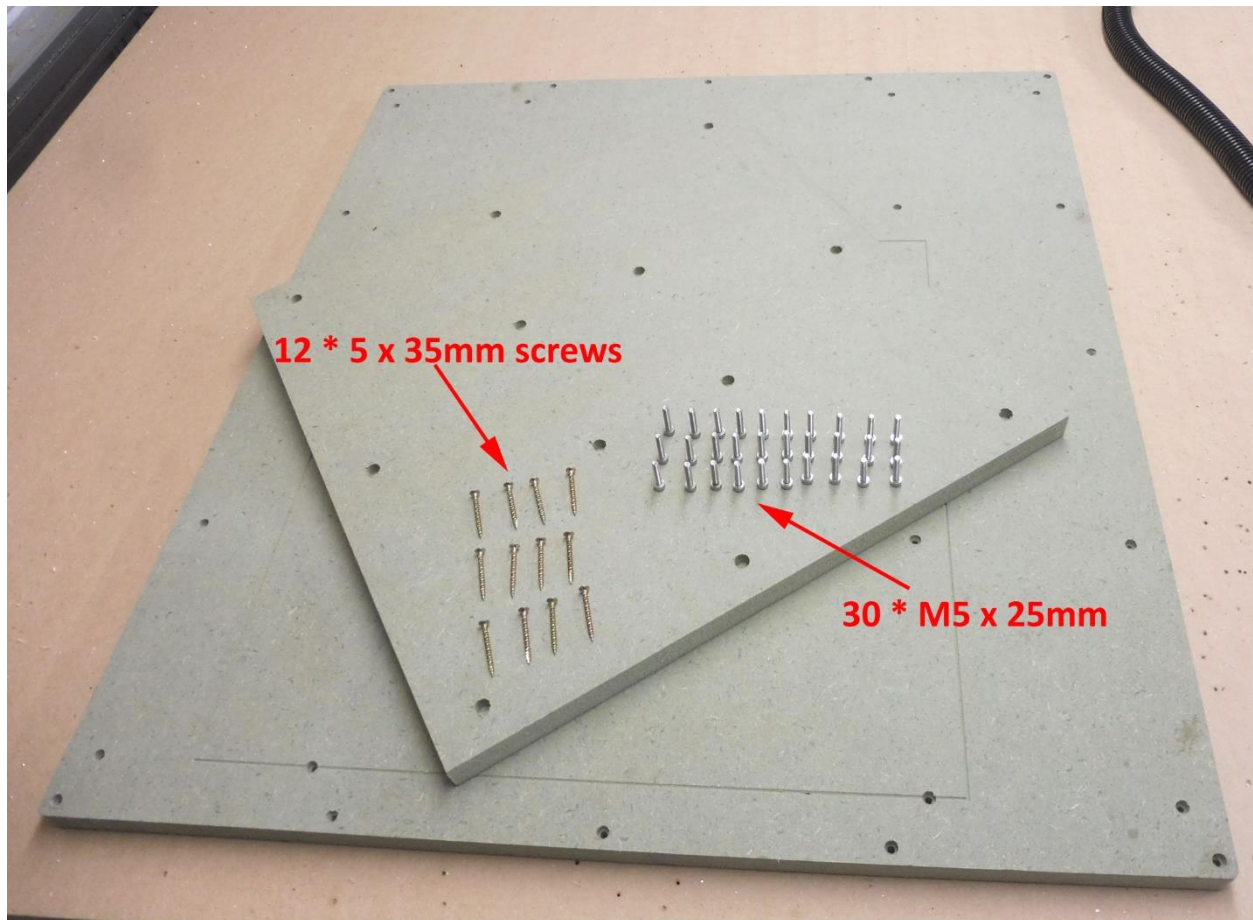

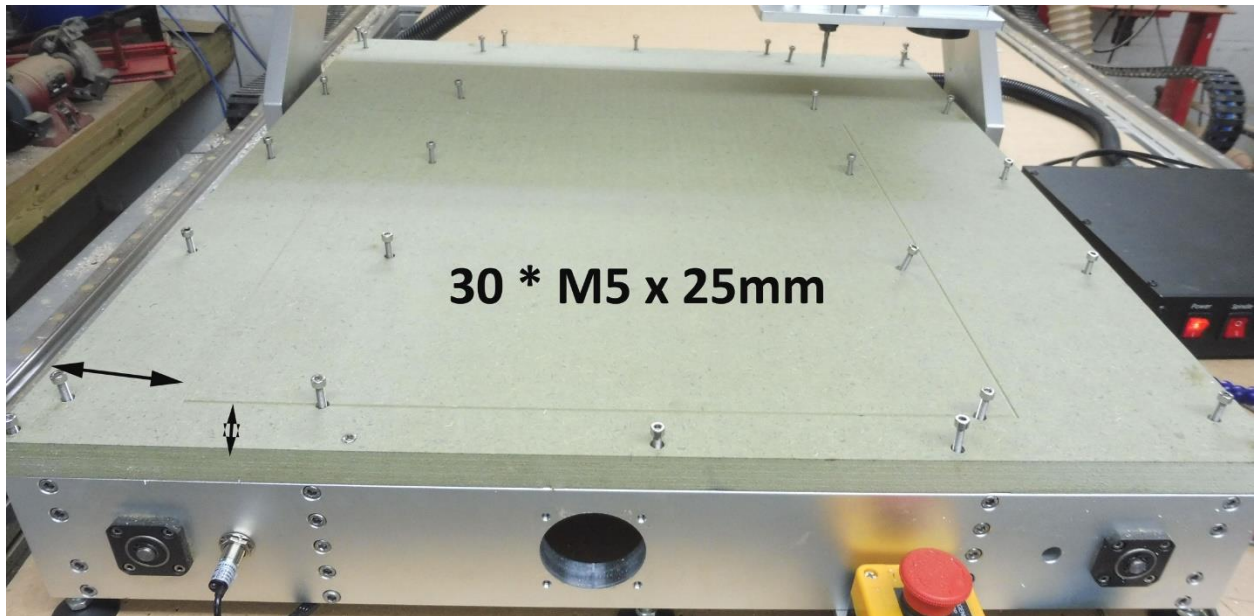


Insert the M5 x 25mm screws into the base and bolt down till level with pockets in the MDF.

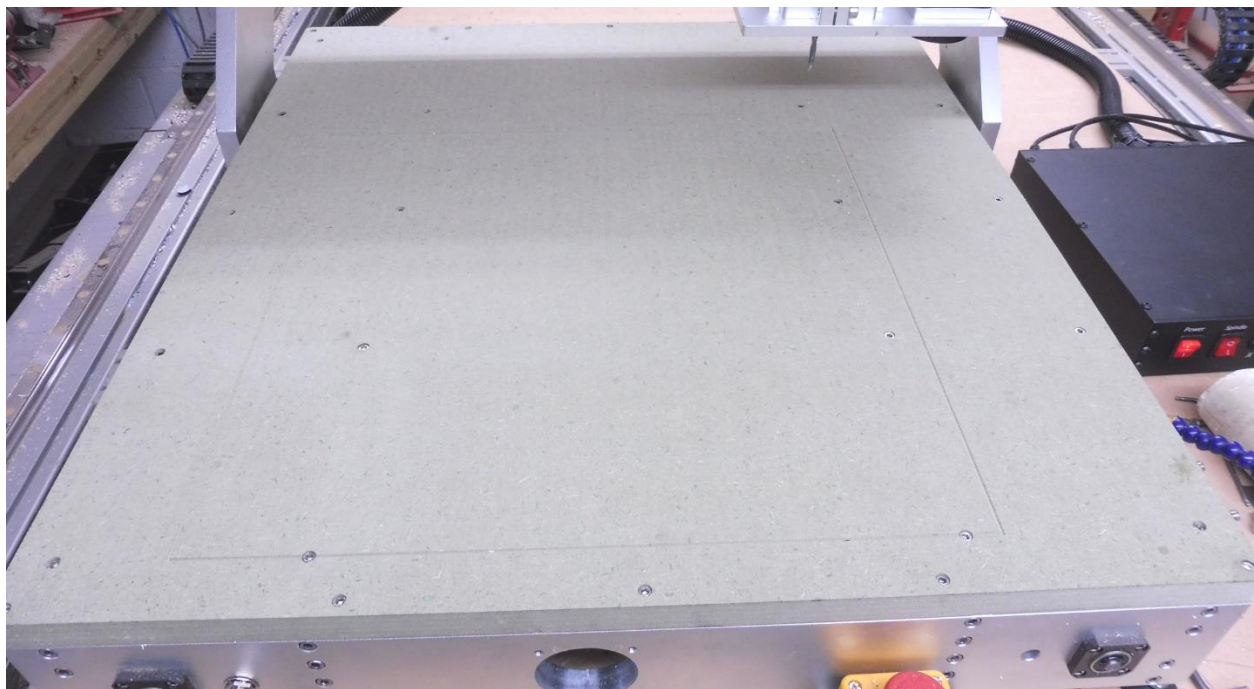



Line up the 500mm MDF with the engraved line on the base MDF.
Insert the 12 screws into the MDF.

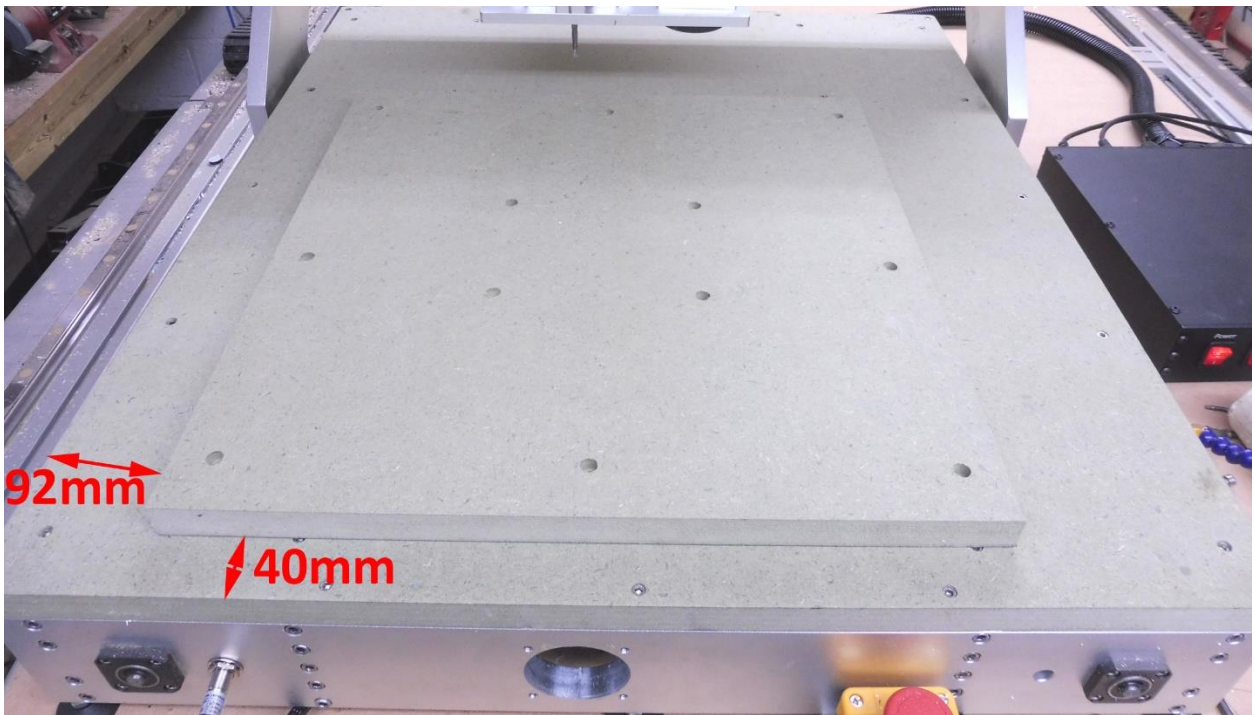

Make sure the 500mm MDF is kept lined up with the engraved lines on the MDF base and screw down nice and tight.

You can now skim the top of the spoil board to remove the shiny surface.

You should only need to skim off approximately 1mm to get rid of the surface.